

# FRESH AIR EXCHANGE RATE CONVERSION

Maersk



### Ventilator % Open




Ventilation % Open	Starcool	
	CFM	CMH
0	0	0
5	8	13
10	16	27
15	24	40
20	32	54
25	40	67
30	48	81
35	56	95
40	64	108
45	72	122
50	80	135
55	84	142
60	88	149
65	92	156
70	96	163
75	100	170
80	106	180
85	113	191
90	119	202
95	126	214
100	132	225





## Ventilator % Open


Ventilation % Open	Carrier			
	20REEF		40HCRF	
	CFM	CMH	CFM	CMH
0	0	0	0	0
5	14	23	11	19
10	32	54	26	44
15	39	67	30	50
20	59	101	45	77
25	68	116	53	90
30	79	135	62	106
35	90	152	71	120
40	102	173	81	138
45	115	196	93	157
50	128	217	103	175
55	131	222	106	180
60	136	231	110	187
65	141	239	114	194
70	145	247	118	200
75	148	251	121	205
80	155	263	126	214
85	159	270	129	220
90	163	277	133	226
95	168	286	137	233
100	174	295	141	240

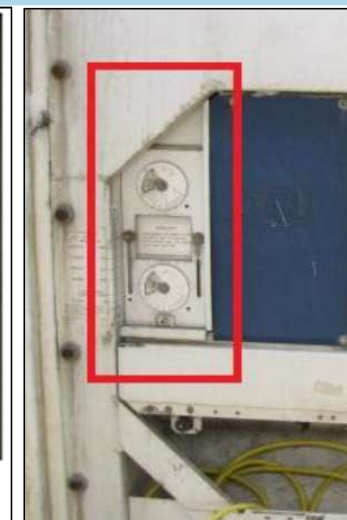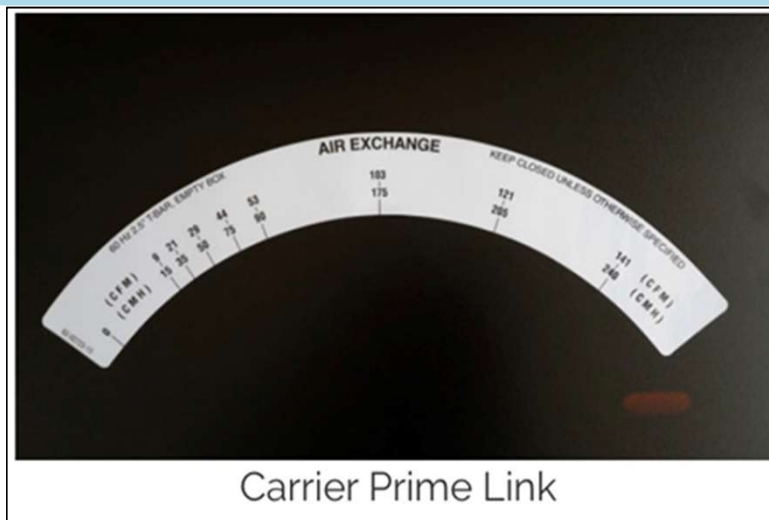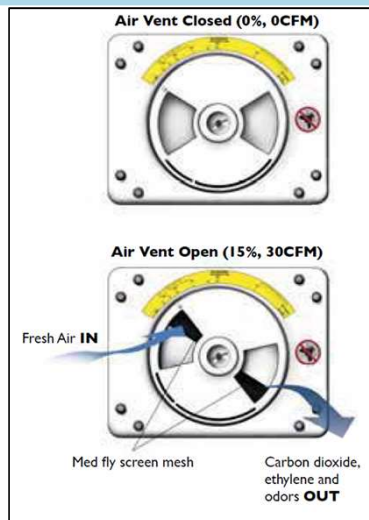



### Ventilator % Open

Ventilation % Open	Daikin	
	CFM	CMH
0	0	0
5	8	13
10	15	25
15	22	38
20	29	50
25	37	63
30	44	75
35	52	88
40	59	100
45	67	113
50	74	125
55	81	138
60	88	150
65	96	163
70	103	175
75	111	188
80	118	200
85	125	213
90	132	225
95	140	238
100	147	250

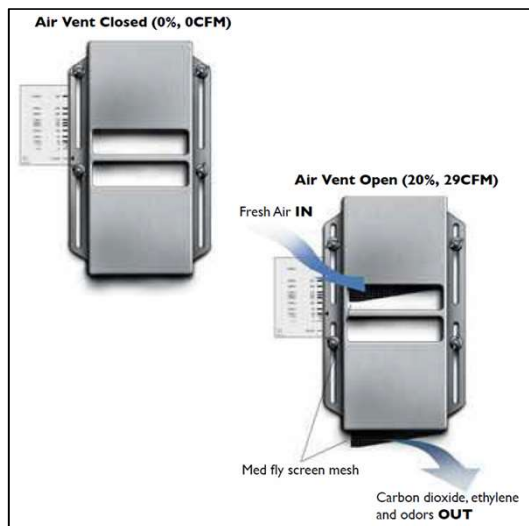





### Ventilator % Open

Ventilation % Open	Thermoking	
	CFM	CMH
0	0	0
5	9	15
10	21	35
15	25	42
20	30	51
25	45	76
30	53	90
35	60	101
40	67	113
45	75	127
50	83	141
55	90	152
60	98	166
65	110	186
70	119	202
75	125	212
80	135	229
85	147	249
90	153	259
95	160	271
100	165	280





Thank you! 😊

